



## Articulating Sconce

### Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly of this lighting fixture.
- This fixture has been rated for up to (1) 60-watt maximum Type A standard incandescent light bulb (not included) or a 13-watt compact fluorescent bulb (included in box for lamps sold in the state of California). To avoid the risk of fire, do not exceed the recommended bulb wattage.
- Please save these instructions for future reference.

### WARNING:

- To reduce the risk of fire, electric shock or other personal injury, always turn off the light fixture and allow the bulb to cool prior to replacing the light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at a lit bulb, for obvious reasons.
- Do not touch the metal bell shade when the fixture is turned on,
- Keep flammable materials away from any lit bulb.

### Parts enclosed:

(A)	(2)	Wall Anchors
(B)	(2)	Metal Screws
(C)	(1)	Mounting Plate
(D)	(1)	Sconce
(E)	(1)	Finial
(F)	(1)	Harp
(G)	(1)	Saddle
(H)	(1)	Cord cover
(I)	(1)	13W CFL bulb
(J)	(1)	Nut
(K)	(1)	Paper Mounting Template

**Tools Required (not included):** Phillips Screwdriver, Level, Stud Finder

### Pre-assembly:


- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until assembly is complete to avoid accidentally discarding small parts or hardware.

### Assembly Instructions:

1. Hold the provided paper mounting template (K) level at a desired location on a wall. Use a level to ensure that the template is level and then use a pencil to mark the wall through the template at each of the two dots located on the template (the locations of the keyholes). Set the template aside. The remaining marks will be the location of the mounting hardware.

**Note:** If either of these two marks happens to align with a wall stud (use a stud finder to determine this), do not use the provided anchors - they cannot penetrate wood. Either use a provided metal screw at that particular mark or simply move the two marks (about 2 inches) to the right or the left to avoid the stud. If you decide to use the stud mark, use the screwdriver to secure a screw directly into the wall and stud at that mark. Rotate the screw until the screw head is about 3/8 inch from the wall.

2. For the marks that do not align with a wall stud, use a screwdriver to install an anchor into the wall. Place the tip of the anchor at the mark and use the screwdriver to both rotate the anchor (clockwise) and firmly push it into the wall. The anchor will drive itself into the wall like a screw. Continue rotating the anchor until its wide end is even with the wall surface. Do not over-tighten.
3. Use the screwdriver to secure a provided metal screw into each installed anchor. Rotate the screw clockwise until the screw head is about 3/8 inch from the wall.
4. Attached the cord cover (H) to the base of the fixture by rotating it clockwise to engage the threads.
5. Insert the Harp (F) into the Saddle (G) by sliding the two end caps away from the ends and then squeezing the two harp ends together, positioning them onto the saddle (G) and then releasing the arms that the harp ends engage the saddle. The caps should slide back over the saddle to hold the harp in place.
6. Unscrew the Finial (E) from the Harp (F) and place a desired shade (not included) over the secured Harp (F) so that the threaded stud located at the top of the harp extends through the hole at the top center of the shade.
7. Re-attach the Finial (E) and hand tighten to secure the shade.
8. Insert a bulb - MAX (TYPE A) STANDARD 60-watt (excluded) or a 13-watt compact fluorescent bulb (included in box for lamps sold in the state of California) into the Socket.
9. Lift the sconce so that the two keyholes cutouts located on the back of the Mounting Plate (of the fixture base) align with and engage the protruding screw heads. Gently lower the fixture so that the screws support the full weight. If the fixture appears loose, remove by lifting and pulling off the screw heads and then using a screwdriver tighten the screw heads a bit and reattach the fixture.
10. Plug into the proper electrical outlet and test the fixture

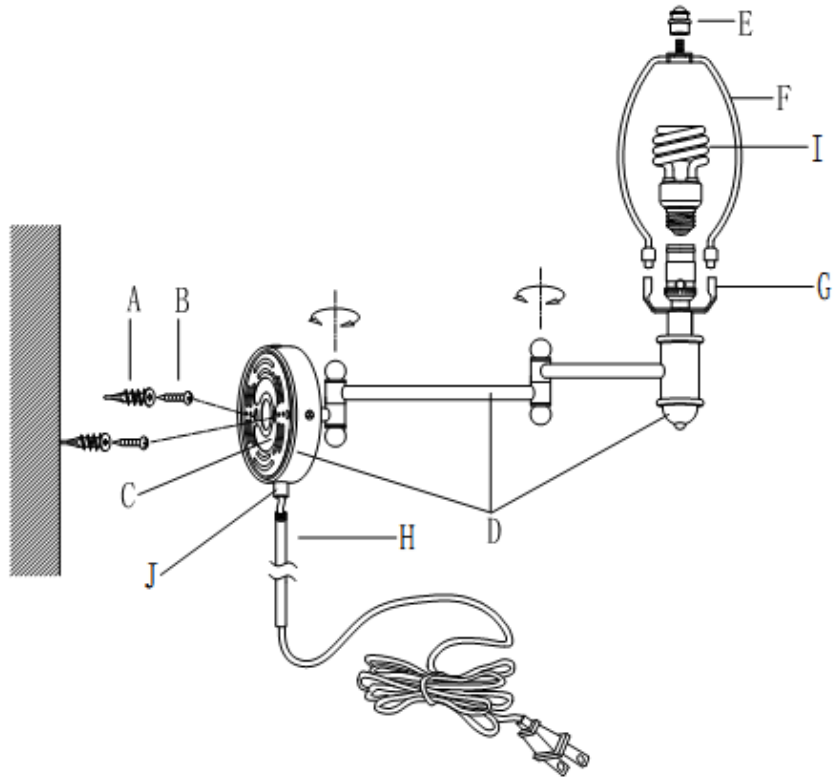

#### CARE INSTRUCTIONS:

- Wipe with a soft, dry cloth.
- To protect the finish, do not use household cleaners or abrasives.

Thank you for your purchase.  
[www.pbteen.com](http://www.pbteen.com)